


# How to place the “Sleeve Fast”

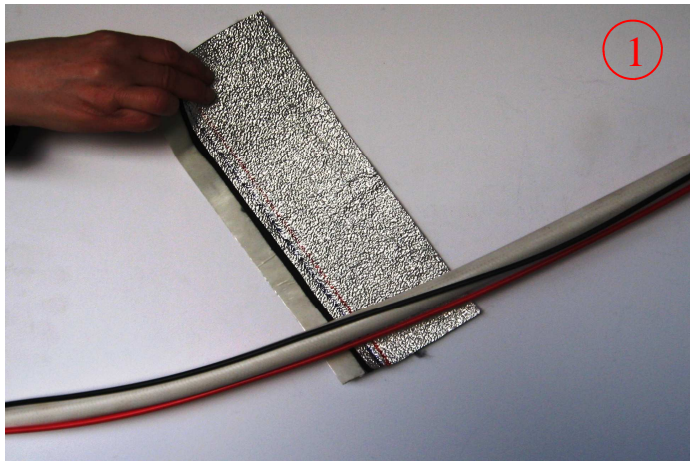


With this sleeve you can protect already installed cables or pipes without having to disconnect them.




Verify that the closure of the sleeve results in the overlap of the two strips of black fiber and that there is continuity along the diameter of the insulation. Remove the external liner.



Characteristic of this sleeve is that there is a double bonding interior - exterior. You will have to remove the liner from the internal adhesive (side lines).

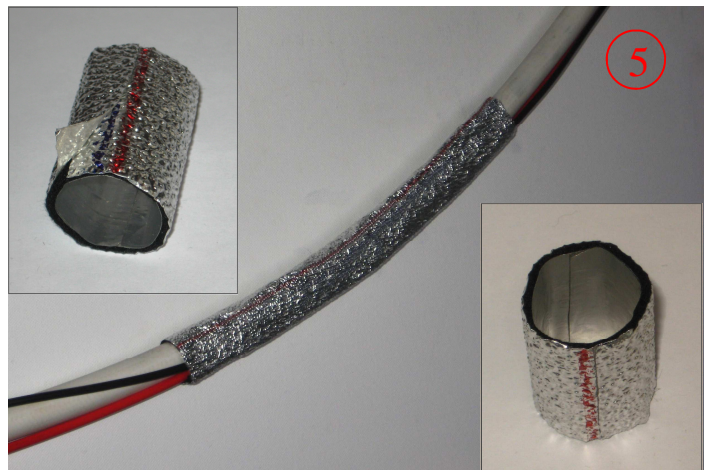

You can then proceed with the external bonding. The result of a proper bonding is as shown in Figure 5. The inside line (blue in the example) is covered and the external line (red in the example) is visible.

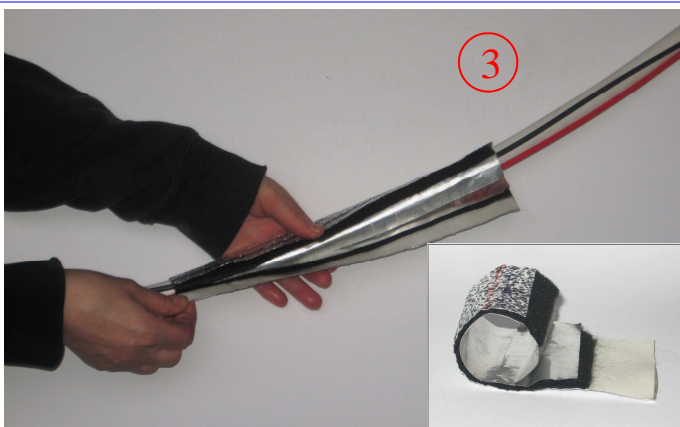

The subsequent operation of bonding must respect the position referred to in points 4 and 5,

